



Mounting kit

- (A) 8x M6x12 screw
- (B) 8x M6 nut
- (C) 4x M12 Washer
- (D) 4x Cisco adapter


Supplied by Cisco:

- (E) 4x M12 screw

Cisco Spark Board 70"

Use PFS 3206 / PFS 3306

Install on top and bottom of strip

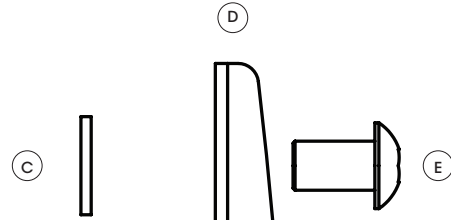

Cisco Spark Board 55"

Use PFS 3204 / PFS 3304

Install on top and bottom of strip

